

### Contents

1. Factory default settings
2. Factory program settings
3. Resetting the programmer
4. Setting the date and time
5. ON/OFF period selection
6. Adjusting the program settings
7. Reviewing the program settings
8. Boost function
9. Advance function
10. Holiday mode
11. Connect RF thermostat with the programmer
12. Disconnect RF thermostat from the programmer
13. Backlight mode selection
14. Keypad lock and unlock
15. Copy function
16. Frost protection
17. Master reset



#### Important: Keep this document

This 2 zone RF programmer is designed to provide ON/OFF control for 2 zones, with the value added application of in built frost protection.



**CAUTION!**

Before commencing, disconnect the device from the mains. There are parts that carry mains voltage behind the cover. Never leave unsupervised when it is open. (Prevent non specialists and especially children from gaining access to it.)

Never remove this product from the electrical baseplate. Disconnect from mains supply in the event of any damage to any buttons. Do not use sharp tools to push any button.

## 1. Factory default settings



Program: 5/2D  
 Backlight: On  
 Keypad: Unlocked  
 Frost Protection: Off

## 2. Factory program settings

Icon	5/2D					
	P1 ON	P1 OFF	P2 ON	P2 OFF	P3 ON	P3 OFF
Mon-Fri	6:30	8:30	12:00	12:00	16:30	22:30
Sat-Sun	7:30	10:00	12:00	12:00	17:00	23:00

Icon	7D					
	P1 ON	P1 OFF	P2 ON	P2 OFF	P3 ON	P3 OFF
All 7 days	6:30	8:30	12:00	12:00	16:30	22:30

Icon	24H					
	P1 ON	P1 OFF	P2 ON	P2 OFF	P3 ON	P3 OFF
Everyday	6:30	8:30	12:00	12:00	16:30	22:30

## 3. Resetting the programmer

It is necessary to press the **RESET** button prior to initial programming. This button is located behind the cover on the front of the unit.

## 4. Setting the date and time



Lower the cover on the front of the unit. Move the selector switch to the **CLOCK SET** position.

- Press the **+** or **-** buttons to select the day. Press **OK**
- Press the **+** or **-** buttons to select the month. Press **OK**
- Press the **+** or **-** buttons to select the year. Press **OK**
- Press the **+** or **-** buttons to select the hour. Press **OK**
- Press the **+** or **-** buttons to select the minute. Press **OK**
- Press the **+** or **-** buttons to select 5/2D, 7D or 24H Press **OK**

The date, time and function are now set. Move the selector switch to the **RUN** position to run the program, or to the **PROG SET** position to change the program setting.

## 5. ON/OFF period selection

There are 4 modes available on this programmer for users to choose for their individual application.

- AUTO** The programmer operates 3 'ON/OFF' periods per day.
- ALL DAY** The programmer operates 1 'ON/OFF' period per day. This operates from the first ON time to the third OFF time.
- ON** The programmer is permanently on. **\*\*ON\*\***
- OFF** The programmer is permanently off. **\*\*OFF\*\***

Lower the cover on the front of the unit. By pressing the **ZONE 1 SELECT** button, you can change between AUTO / ALL DAY / ON / OFF for Zone 1.

Repeat this process for Zone 2 by pressing the **ZONE 2 SELECT** button.

## 6. Adjusting the program settings



Lower the cover on the front of the unit. Move the selector switch to the **PROG SET** position. You can now program zone 1.

- Press the **+** or **-** buttons to adjust the **P1 ON** time. Press **OK**
- Press the **+** or **-** buttons to adjust the **P1 OFF** time. Press **OK**

Repeat this process to adjust the **ON & OFF** times for **P2 & P3**.

Press **ZONE 2 SELECT** and repeat the above process to adjust for Zone 2.

When completed, move the selector switch to the **RUN** position.

## 7. Reviewing the program settings



Lower the cover on the front of the unit.

Move the selector switch to the **PROG SET** position.

By pressing **OK** this will review each of the **ON/OFF** times for P1 to P3 for Zone 1.

Press **ZONE 2 SELECT** and repeat the above process to adjust for Zone 2.

When completed, move the selector switch to the **RUN** position.

## 8. Boost function

This function allows the user to extend the **ON** period for 1, 2 or 3 hours.

If the zone that you wish to **Boost** is timed to be **OFF**, you have the facility to switch it **ON** for 1, 2 or 3 hours.

Press the required button, **ZONE 1 Boost** for Zone 1, **ZONE 2 Boost** for Zone 2. - once, twice or three times respectively.



To cancel the boost function, simply press the respective boost button again.

### 9. Advance function

This function allows the user to bring forward the next switching time.

If the zone is currently timed to be **OFF** and the **ADV** is pressed, the zone will be switched **ON** until the end of the next switching time.


If the zone is currently timed to be **ON** and the **ADV** is pressed, the zone will be switched **OFF** until the end of the next switching time.


Press  for Zone 1 and  for Zone 2.

To cancel the **ADVANCE** function, simply press the respective **ADV** button again.




### 10. Holiday mode




Lower the cover on the front of the unit.




Move the selector switch to the **RUN** position. 




Press the  button.


The current date and time will flash on the screen. It is now possible to enter the date and the time when you plan to return.


Press the  or  buttons to select the day. Press 

Press the  or  buttons to select the month. Press 

Press the  or  buttons to select the year. Press 

Press the  or  buttons to select the hour. Press 



To activate Holiday mode press the  button.

To cancel Holiday mode press the  button again.

Otherwise Holiday mode will deactivate on the time and date entered.

### 11. Connect the RF thermostat with the programmer

**On the programmer**



Lower the front cover and move the selector switch to the **RUN** position. Press the  button for 5 seconds. 


**Wireless Connect** will appear on the screen.

**On the RFR wireless room thermostat or RFC wireless cylinder thermostat**

Press the **Code** button. This is located inside the housing on the PCB.

**On the programmer**

Zone 1 will begin to flash. Press the  or  button for the zone you wish to connect the thermostat to.

The wireless symbol  appears on the screen.


The thermostat will count upwards to the number of the zone that it is paired with. When it reaches the number of the zone that it is paired with press the handwheel on the thermostat.


The programmer is now operating in the wireless mode. The temperature of the wireless thermostat is now displayed on the programmer.

Repeat this process for the second zone if required.


### 12. Disconnect the RF thermostat from the programmer


**On the programmer**

Lower the front cover and move the selector switch to the **RUN** position. 

Press the  button for 5 seconds.

**Wireless Connect** will appear on the screen.

Press the  button for 3 seconds. This will clear all RF connections thereby disconnecting all thermostats from the timeswitch.

Press the  button.


### 13. Backlight mode selection On

There are two settings for selection. The factory default setting is ON.


**ON** The backlight is permanently ON.



**AUTO** On pressing any button the backlight stays on for 10 seconds.


To adjust the backlight setting

Lower the cover on the front of the unit. 




Move the selector switch to the **RUN** position.




Press the  button for 5 seconds.

Press either the  or  buttons to select the **ON** or **AUTO** mode.

Press the  button.


### 14. Keypad lock and unlock Unlocked

To lock the keypad, press and hold the  and  buttons for 5 seconds.  will appear on the screen. The keypad is now locked.

To unlock the keypad, press and hold the  and  buttons for 5 seconds.  will disappear from the screen. The keypad is now unlocked.


 
### 15. Copy function

**Copy function may only be used if the programmer is in the 7d mode.**

Lower the cover on the front of the programmer. 


Move the selector switch to the **PROG SET** position.


First, program one of the days of the week with a schedule you wish to copy to other days.



While still on that day press and hold the   button for 3 seconds.


This will take you into the Copy screen.

The day of the week that is to be copied is shown and the day it is to be copied to is flashing.

Press the  button to copy the schedule to this day.

Press the  button to skip this day


Continue in this fashion by pressing the  button to copy the schedule to the day flashing and by pressing the  button to skip that day.



When you are finished press the  button and the programmer will return to the standard schedule programming screen.



 
### 16. Frost protection function Off


 

Selectable range 5~20°C. This function is set to protect pipes against freezing or to prevent low room temperature when the programmer is programmed to be OFF or is manually OFF.

Frost protection can be activated by following the procedure below.

Move the selector switch to the **RUN** position. 

Press both the  and  buttons for 5 seconds, to enter selection mode.

Press either the  or  buttons to turn **On** or turn **Off** frost protection. Press  button to confirm.

Press either the  or  buttons to increase or decrease the desired frost protection setpoint. Press  to select.

All zones will be switched ON in the event of room temperature falling below the frost protection setpoint.

### 17. Master reset

Lower the cover on the front of the programmer. There are four hinges holding the cover in place. Between the 3rd and 4th hinges there is a circular hole. Insert a ball point pen or similar object to master reset the programmer.

After pressing the master reset button, the date and time will now need to be reprogrammed.