


R27-HW - 2 Zone Programmer

Simplified Instructions for the user

1. Setting the date & time

- Lower the cover on the front of the unit.
- Move the selector switch to the **CLOCK SET** position.
- Press the **+** or **-** buttons to select the DAY and press **OK**
- Repeat the above to select the MONTH, YEAR, HOUR and MINUTE.
- When this is complete, move the selector switch to the **RUN** position.

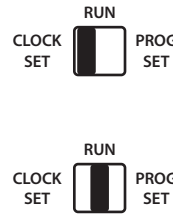

Important: Keep this document



2. ON/OFF settings 4 different settings available

How to select

- Lower the cover on the front of the unit.
- By pressing the **SELECT** button to change between settings for **Hot Water Zone**.
- Repeat this process for **HEATING** by pressing the **SELECT** button.

AUTO	operates up to 3 ON/OFF periods per day
ALL DAY	operates from 1st ON time (P1 on) to last off time (P3 off)
ON	permanently on
OFF	permanently off


3. Factory program settings

	5/2D					
	P1 ON	P1 OFF	P2 ON	P2 OFF	P3 ON	P3 OFF
Mon-Fri	6:30	8:30	12:00	12:00	16:30	22:30
Sat-Sun	7:30	10:00	12:00	12:00	17:00	23:00

4. Adjusting the program settings

For Hot water

 - Lower the cover on the front of the unit.
- Move the selector switch to the **PROG SET** position.
- Press the **+** or **-** buttons to adjust the **P1 ON** time. Press **OK**
- Press the **+** or **-** buttons to adjust the **P1 OFF** time. Press **OK**
- Repeat this process to adjust the **ON & OFF** times for **P2 & P3**.
- When this is complete, move the selector switch to the **RUN** position.



For Heating

- Lower the cover on the front of the unit.
- Move the selector switch to the **PROG SET** position.
- Press **SELECT** to adjust heating times.
- Press the **+** or **-** buttons to adjust the **P1 ON** time. Press **OK**
- Press the **+** or **-** buttons to adjust the **P1 OFF** time. Press **OK**
- Repeat this process to adjust the **ON & OFF** times for **P2 & P3**.
- When this is complete, move the selector switch to the **RUN** position.

5. Boost function

This function allows the user to turn **ON** the Heating or Hot water for period of 1,2 or 3 hours. This does not affect your program settings.

If the zone that you wish to **Boost** is timed to be **OFF**, you have the facility to switch it **ON** for 1,2 or 3 hours.

- Press the required boost button:  for **HOT WATER** or  for **HEATING** once, twice or three times respectively.
- To cancel the boost function, simply press the respective boost button again.



EPH Controls Ireland

technical@ephcontrols.com www.ephcontrols.com

EPH Controls UK

technical@ephcontrols.com www.ephcontrols.co.uk