

# CRF3P-313201 / CRF3P-323201 3 Channel Wireless Pack

## Wiring Diagram

### Components:

- 1 x 3 Zone Wireless Programmer
- 3 x 2 Port Motorised Valves
- 3 x Wireless Room Thermostat
- 1 x Wiring Centre




**CAUTION!**

Consult the boiler installation instructions before wiring!

Boiler manufacturers wiring schematics may vary:

- A permanent power supply may be required
- An overrun function may be required
- A volt-free signal from the motorised valves limit switches may be required

**SPUR FUSED @ 3A**


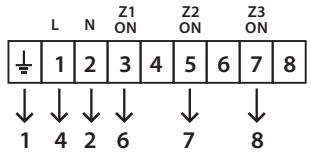


$\downarrow$  N L  
 $\downarrow$  1 2 4

**R37-RF**  
Programmer




**RFR**  
Room Thermostat (1)


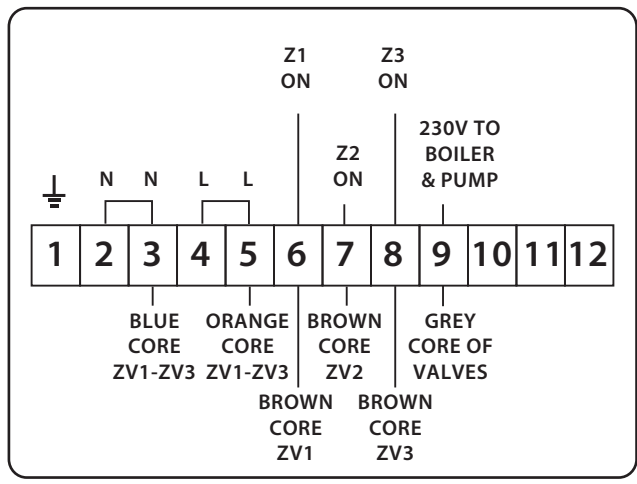



**HEATING VALVE (ZV1)**

6	←	BROWN
3	←	BLUE
5	←	ORANGE
9	←	GREY
1	←	EARTH




**RFR**  
Room Thermostat (2)





**HEATING VALVE (ZV2)**

7	←	BROWN
3	←	BLUE
5	←	ORANGE
9	←	GREY
1	←	EARTH




**RFR**  
Room Thermostat (3)




**HEATING VALVE (ZV3)**

8	←	BROWN
3	←	BLUE
5	←	ORANGE
9	←	GREY
1	←	EARTH




**WIRING CENTRE**

**BOILER**



$\downarrow$	→	1
N	→	3
L	→	9

**PUMP**



$\downarrow$	→	1
N	→	3
L	→	9

