

Contents

1. Factory default settings
2. Specification & wiring
3. Mounting
4. Installation
5. Wiring diagram
6. Frost protection
7. Button / symbol description
8. Resetting the thermostat
9. Keypad lock and unlock
10. High and Low temperature limitation
11. Adjusting the switching differential
12. Adjusting the setpoint temperature
13. Change the thermostat mode
14. On / Off control mode
15. Delay start control mode
16. TPI control mode



CAUTION!

Before commencing any work on the electrical connections, you must first disconnect the thermostat from the mains. None of the 230V connections must be live until the installation has been completed and the housing is closed. Only qualified electricians or authorised service staff are permitted to open the thermostat.

There are parts that may carry mains voltage behind the cover. The thermostat must not be left unsupervised when open. (Prevent non specialists and especially children from gaining access to it.)

CE

Important: Keep this document

Prior to setting the thermostat, it is necessary to complete all required settings described in this section.

1. Factory default settings

Contacts:	Volt Free
Temperature indicator:	°C
Switching differential:	0.4°C
In built frost protection:	5°C
High and Low temp. limitation:	Off
Blue backlight activated :	for 10 secs after any button is pressed
Keypad lock:	Off

2. Specifications & wiring

Power supply:	230Vac 50Hz
Power consumption:	8 VA
Temp. control range:	5 ... 35°C
Ambient temperature:	0 ... 50°C
Contact rating:	8A 230Vac
Dimensions:	84 x 84 x 30mm
Temperature sensor:	NTC 10K Ohm @ 25°C
Switching differential:	Adjustable from 0.2/0.4/0.6/0.8/1.0°C
Frost protection:	Only operational in stand by mode

3. Mounting

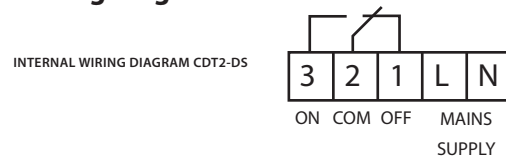
The mounting height should be 1.5 meters above the floor level.
 The thermostat should be wall mounted in the room where the heating is to be controlled.
 The place of installation should be chosen so that the sensor can measure the room temperature as accurately as possible.
 Choose the mounting location to prevent direct exposure to sunlight or other heating / cooling sources when mounted.

- The unit can be fitted to:
1. Recessed conduit boxes
 2. Surface mounting boxes
 3. Directly on walls.

4. Installation

Slacken the fastening screw on the bottom of the thermostat with a philips head screwdriver.
 The thermostat is hinged and can be opened 180 degrees.
Mount the unit as described in section 3.
 Wire the thermostat according to the wiring diagram.
Set jumper JP3 to desired control mode as per section 13.
 Close the thermostat and tighten the fastening screw.

5. Wiring diagram



If mains voltage output is required, terminals L & 2 must be electrically linked.

6. Frost protection 5°C

Frost protection is built into this thermostat, it is pre fixed at 5°C and is not adjustable.
 It will only be activated when the thermostat is in the stand by mode and the room temperature reaches 5°C.

7. Button / Symbol description





 



 

 

8. Resetting the thermostat

It is necessary to reset the thermostat prior to initial use.
 Press and hold the button for 5 seconds.
 dEL will appear on the screen.
 Press the button on the side of the thermostat.



 
 
9. Keypad lock and unlock OFF

To lock the keypad, press and hold the and buttons for 5 seconds.
 will appear on the screen. The keypad is now locked.
 To unlock the keypad, press and hold the and buttons for 5 seconds.
 will disappear from the screen. The keypad is now unlocked.





10. High and Low temperature limitation OFF

An upper and lower temperature limit may be chosen. Press and hold the  and  buttons for 10 seconds. "Limit OFF" will appear on the screen. Press the  button to select "Limit ON" mode. Press the  button to confirm you wish to adjust the high limit temperature. Press the  and  buttons to select the high limit temperature. Press the  button to select the low limit temperature mode. Press the  and  buttons to select the low limit temperature. Press the  button and the thermostat is ready for operation. "Limit" will appear on the screen.



To deactivate High and Low temperature limitation.

Press and hold the  and  buttons for 10 seconds. "Limit ON" will appear on the screen. Press the  button to deactivate this function. "Limit OFF" will appear on the screen. Press the  button and the thermostat is ready for operation.


11. Adjusting the switching differential (Nor + DS)

Press the  button once, Diff set will appear on the screen. The factory default switching differential of 0.4°C will appear on the screen. Press the  and  buttons to select the desired differential from 0.2 - 1°C. Press the  button to return to normal operation.

12. Adjusting the setpoint temperature

Press the  or  buttons to adjust the temperature setpoint.

13. Change the thermostat mode


- a.) Nor - Normal On/Off mode 
- b.) D.S. - Delay Start mode
- c.) TPI - Time, Proportional, Integral mode




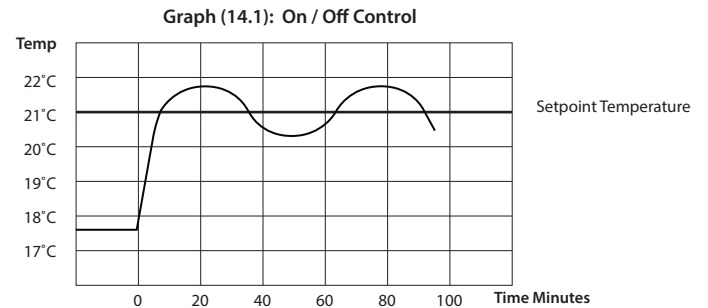
Slacken the fastening screw on the bottom of the thermostat with a philips head screwdriver. The thermostat is hinged and can be opened 180 degrees. On the printed circuit board, you will see jumper, JP3 which has 4 pins. The default position is the middle two pins which is Normal On/Off mode. Pull out the jumper and insert it in the top two pins for TPI control or insert it in the bottom two pins for Delay Start control. Close the thermostat and tighten the fastening screw.

Once the jumper has been changed the thermostat must be reset for these changes to become effective. (See section 8.)

14. On/Off control mode (Nor)

When the temperature falls below the setpoint temperature, the flame symbol  will appear and the thermostat will switch on.

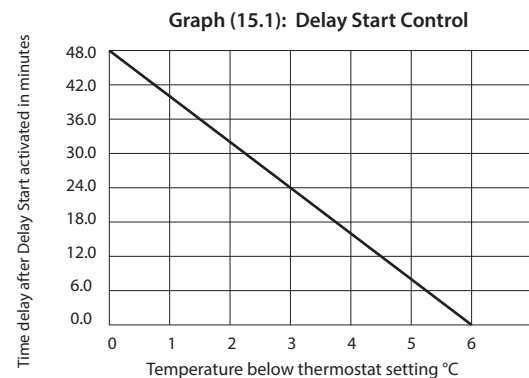
When the temperature rises above the setpoint temperature, the flame symbol  will disappear and the thermostat will switch off.




15. Delay start control mode (D.S.)

Delay start is an energy saving mode.

When the delay start function is active the flame symbol will continuously flash on the screen. When in this mode the activation of the thermostat is delayed by a variable time depending on the current temperature, setpoint temperature and also the fall in temperature from when the delay start has activated. See graph (15.1) Delay Start Control.



The flame symbol  will continue to flash until the thermostat activates. When activated the thermostat will allow the heating system time to reach the setpoint and delay start will remain inactive until it reaches this setpoint.

Delay start can be reactivated by:

Lowering the setpoint below the current temperature, pressing the set button twice to set the temperature, then raising the setpoint above the zone temperature.

The heating will be delayed as per the line on the graph.

If the difference between the actual temperature and the setpoint is 1°C the thermostat will delay starting for circa 40 minutes.

If the difference between the actual temperature and the setpoint is 3°C the thermostat will delay starting for circa 24 minutes.

If the difference is 6°C or more, the heating will be switched on immediately.

The time delay will change if the temperature drops from the original calculation.

To deactivate Delay Start, loosen the fixing screw and change the position of the jumper JP3. Change the position of the jumper to TPI or Nor.

16. TPi control mode - Time Proportional Integral

TPi control is a mode that ensures the thermostat reacts to settings inputted by the user to allow it to accurately control the heat and save energy. When the temperature is rising in the zone and falls into the Proportional Bandwidth section, TPi will start to affect the thermostats operation. The thermostat will turn on and off as it gains heat so that it doesn't overshoot the setpoint by too much. It will also turn on if the temperature is falling so it doesn't undershoot the setpoint which will leave the user with a more comfortable level of heat.

There are 3 settings that will affect the thermostats operation:

1. The Minimum Heating Time
2. The Number of Heating Cycles Per Hour
3. The Proportional Bandwidth

These settings can be adjusted by pressing the set button.

Minimum Heating Time:  1 min

The minimum heating time can be set from 1 to 5 mins. This forces the thermostat to continue to heat into the proportional bandwidth for a minimum value of time.

Number of Heating Cycles per Hour:  6 Cycles

This value will decide how often the thermostat will cycle the heating on and off when trying to achieve the setpoint temperature. You can select 3/6/9 or 12.

Proportional Bandwidth:  1.5°C

This value refers to the temperature below the setpoint at which the thermostat will start to operate in TPi Control. You can set this temperature from 1.5°C to 3.0°C in 0.1°C increments.



To adjust TPi settings:

Ensure Jumper JP3 is in TPi mode.

Reset the thermostat.

Press the "Set" button once to adjust Minimum Heating Time



"On 1 Set" appears on screen.

Press  or  buttons to adjust from 1 to 5 minutes respectively.

Press the "Set" button once.

The number of heating cycles per hour can now be selected.



"C6 Set" appears on screen.

Press  or  buttons to adjust from 3/6/9/12 cycles

Press the "Set" button once.

The proportional bandwidth can now be selected.

"b 1.5°C Set" appears on screen.

Press  or  buttons to adjust from 1.5°C to 3°C bandwidth.

Press the "Set" button to return to home screen.

Graph (16.1): TPi Control

