











EMBER SMART HEATING CONTROL - PACK GUIDE

	R17-RF 1 Zone Timeswitch	R27-RF 2 Zone Programmer	R37-RF 3 Zone Programmer	R47-RF 4 Zone Programmer	RFR Room Thermostat	RFC Cylinder Thermostat	GW01 Gateway
							
							
							
							
							
							
							
							
EMBER PACK 1	1						1
EMBER PACK 1 a	1						1
EMBER PACK 2		1				1	1
EMBER PACK 3		1			2		1
EMBER PACK 4		1			1	1	1
EMBER PACK 4 a		1					1
EMBER PACK 5			1		3		1
EMBER PACK 6			1		2		1
EMBER PACK 7			1		1		1
EMBER PACK 8			1		2	1	1
EMBER PACK 8 a			1				1
EMBER PACK 9			1		1	1	1
EMBER PACK 10				1	4		1
EMBER PACK 11				1	3		1
EMBER PACK 12				1	2		1
EMBER PACK 13				1	1		1
EMBER PACK 14				1	3	1	1
EMBER PACK 14 a				1			1
EMBER PACK 15				1	2	1	1
EMBER PACK 16				1	1	1	1