

1. Setting the date & time

- Lower the cover on the front of the unit.
- Move the selector switch to the **CLOCK SET** position.
- Press the **+** or **-** buttons to select the DAY and press **OK**
- Repeat the above to select the MONTH, YEAR, HOUR and MINUTE.
- When this is complete, move the selector switch to the **RUN** position.



Important: Keep this document

2. ON/OFF settings 4 different settings available

How to select

- Lower the cover on the front of the unit.
- By pressing the **ZONE 1 SELECT** button to change between settings for the timeswitch.


AUTO	operates up to 3 ON/OFF periods per day
ALL DAY	operates from 1st ON time (P1 on) to last off time (P3 off)
ON	permanently on
OFF	permanently off

3. Factory program settings

	5/2D					
	P1 ON	P1 OFF	P2 ON	P2 OFF	P3 ON	P3 OFF
Mon-Fri	6:30	8:30	12:00	12:00	16:30	22:30
Sat-Sun	7:30	10:00	12:00	12:00	17:00	23:00

4. Adjusting the program settings

- Lower the cover on the front of the unit.
- Move the selector switch to the **PROG SET** position.
- Press the **+** or **-** buttons to adjust the **P1 ON** time. Press **OK**
- Press the **+** or **-** buttons to adjust the **P1 OFF** time. Press **OK**
- Repeat this process to adjust the **ON & OFF** times for **P2 & P3**.
- When this is complete, move the selector switch to the **RUN** position.

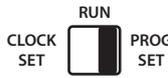

5. Boost function

This function allows the user to turn **ON** the timeswitch for a period of 1, 2 or 3 hours. This does not affect your program settings. If the zone that you wish to **Boost** is timed to be **OFF**, you have the facility to switch it **ON** for 1,2 or 3 hours.

- Press the boost button once, twice or three times respectively.
- To cancel the boost function, simply press the boost button again.

6. Operating the thermostat

The thermostat will allow the timeswitch to activate provided the ambient temperature is below the setpoint.

a) Adjusting the temperature setpoint

Rotate the dial clockwise to increase or counter clockwise to decrease the temperature setpoint.

You can press in the handwheel to confirm or the temperature will be confirmed automatically after 5 seconds.

b) Boost from the thermostat

You can activate the timeclock for 1,2 or 3 hours by pressing the boost button on the thermostat 1, 2 or 3 times.

The thermostat will display +1H, +2H, +3H to represent what is selected.

To turn off the boost from the thermostat, you must press the boost until '+1H, +2H, +3H' disappears from the thermostat screen.