


# R27-HW - 2 Zone Programmer

## Simplified Instructions for the user

### 1. Setting the date & time

- Lower the cover on the front of the unit.
- Move the selector switch to the **CLOCK SET** position.
- Press the **+** or **-** buttons to select the DAY and press **OK**
- Repeat the above to select the MONTH, YEAR, HOUR and MINUTE.
- When this is complete, move the selector switch to the **RUN** position.

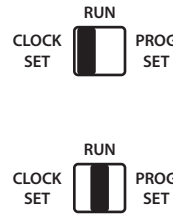

*Important: Keep this document*

### 2. ON/OFF settings 4 different settings available

#### How to select

- Lower the cover on the front of the unit.
- By pressing the **SELECT** button to change between settings for **Hot Water Zone**.
- Repeat this process for **HEATING** by pressing **SELECT** the button.

<b>AUTO</b>	operates up to 3 ON/OFF periods per day
<b>ALL DAY</b>	operates from 1st ON time (P1 on) to last off time (P3 off)
<b>ON</b>	permanently on
<b>OFF</b>	permanently off

### 3. Factory program settings

	5/2D					
	P1 ON	P1 OFF	P2 ON	P2 OFF	P3 ON	P3 OFF
Mon-Fri	6:30	8:30	12:00	12:00	16:30	22:30
Sat-Sun	7:30	10:00	12:00	12:00	17:00	23:00

### 4. Adjusting the program settings

#### For Hot water

- Lower the cover on the front of the unit.
- Move the selector switch to the **PROG SET** position.
- Press the **+** or **-** buttons to adjust the **P1 ON** time. Press **OK**
- Press the **+** or **-** buttons to adjust the **P1 OFF** time. Press **OK**
- Repeat this process to adjust the **ON & OFF** times for **P2 & P3**.
- When this is complete, move the selector switch to the **RUN** position.



#### For Heating

- Lower the cover on the front of the unit.
- Move the selector switch to the **PROG SET** position.
- Press **SELECT** to adjust heating times.
- Press the **+** or **-** buttons to adjust the **P1 ON** time. Press **OK**
- Press the **+** or **-** buttons to adjust the **P1 OFF** time. Press **OK**
- Repeat this process to adjust the **ON & OFF** times for **P2 & P3**.
- When this is complete, move the selector switch to the **RUN** position.

### 5. Boost function

This function allows the user to turn **ON** the Heating or Hot water for period of 1,2 or 3 hours. This does not affect your program settings.

If the zone that you wish to **Boost** is timed to be **OFF**, you have the facility to switch it **ON** for 1,2 or 3 hours.

- Press the required boost button:  for **HOT WATER** or  for **HEATING** once, twice or three times respectively.
- To cancel the boost function, simply press the respective boost button again.



#### EPH Controls Ireland

Sitecast Industrial Estate, Pouladuff,  
Cork, T12 W665, Ireland  
T +353 21 434 6238  
F +353 21 454 5890  
sales@ephcontrols.com www.ephcontrols.com

#### EPH Controls UK

Unit E4, Welland Business Park, Valley Way, Market Harborough,  
Leicestershire, LE16 7PS, United Kingdom  
T +44 1933 626 396  
F +44 1933 626 218  
sales@ephcontrols.co.uk www.ephcontrols.co.uk