RFR - RF Room Thermostat

Installation Instructions

For use in normal environments.



CAUTION! Installation and connection should only be carried out by a qualified person and in accordance with national wiring regulations.


- If this thermostat is used in a way not specified by the manufacturer, it's safety may be impaired.
- Ensure that this wireless enabled thermostat is installed 1 metre from any metallic object, television, radio or wireless internet transmitter.

This thermostat can be mounted in the following ways:


- To a recessed conduit box
- To a surface mounted box
- Directly mounted on wall
- Table mounted with accessory provided.

Important: Keep this document


1

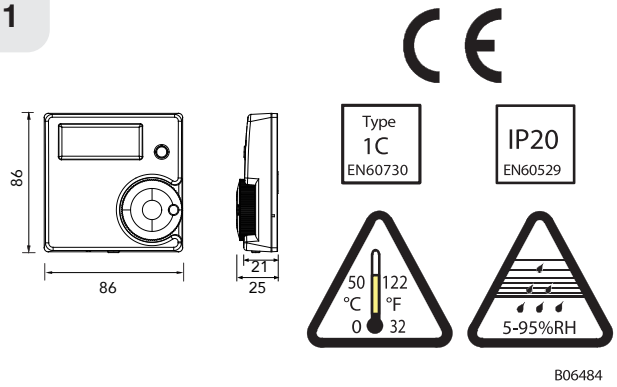

2

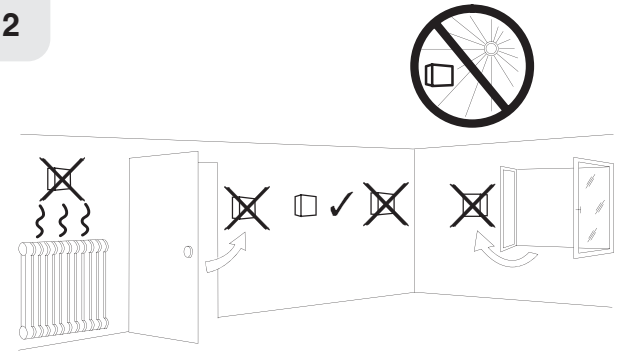


3

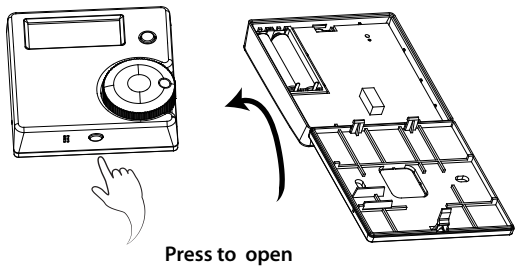


Press to open


4

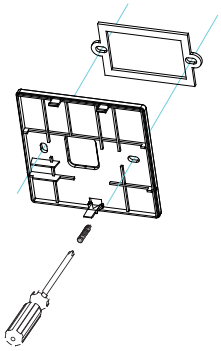

5

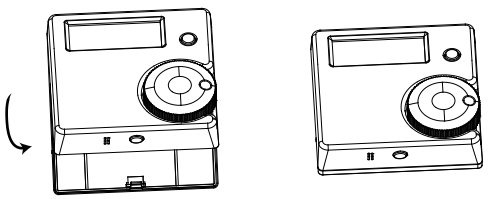

6

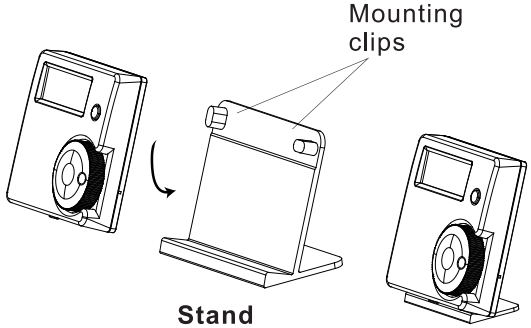

EPH Controls Ireland
021 471 8440 Cork, T12 F753
technical@ephcontrols.com www.ephcontrols.com

EPH Controls UK
01933 322 072 Harrow, HA1 1BD
technical@ephcontrols.co.uk www.ephcontrols.co.uk