CM_ Room Thermostat Hardwired

Installation Instructions

For use in normal environments.

CAUTION! Installation and connection should only be carried out by a qualified person and in accordance with national wiring regulations.

- Before commencing any work on the electrical connections, you must first disconnect the thermostat from the mains.
- None of the 230V connections must be live until the installation has been completed and the housing is closed.
- Only qualified electricians or authorised service staff are permitted to open the thermostat.
- There are parts that carry mains voltage behind the cover. The thermostat must not be left unsupervised when open. (Prevent non specialists and especially children from gaining access to it.)
- If the thermostat is used in a way not specified by the manufacturer, its safety may be impaired.
- Prior to setting the thermostat, it is neccessary to complete all required settings described in this section.

The above image displayed is product CM2, design of other products in the CM_ range may vary.

Important: Keep this document

This thermostat can be mounted in the following ways:

1. To a recessed conduit box 2. To a surface mounted box 3. Directly mounted on wall

1

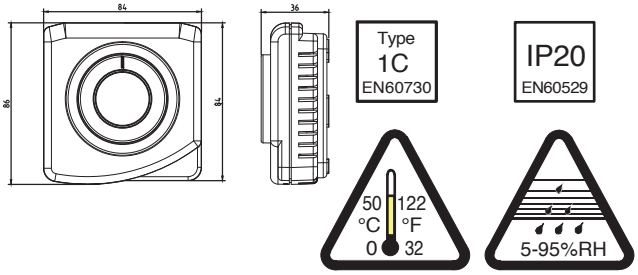

2

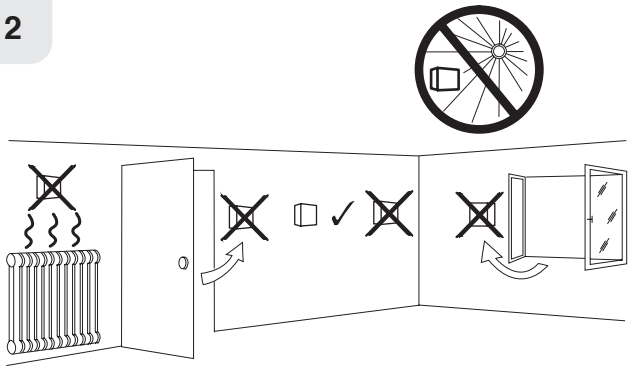

3

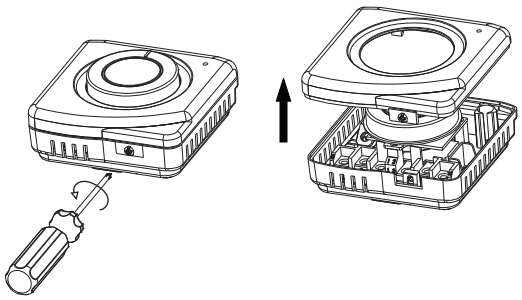

4

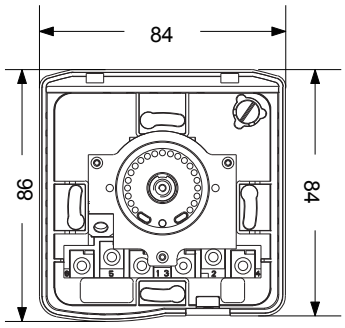

5

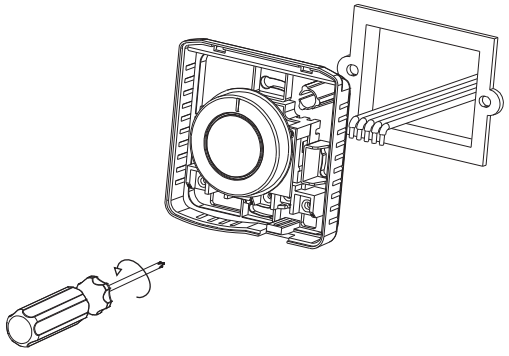

6

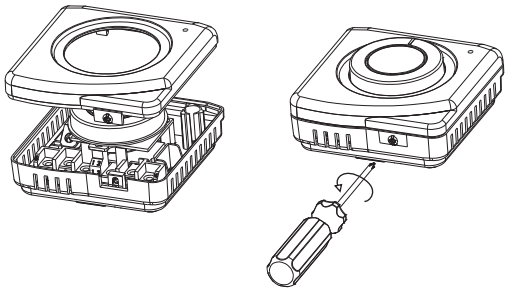

20170221_AW1077_CM_InsIns_JW

EPH Controls Ireland
Sitecast Industrial Estate, Pouladuff,
Cork, T12 W665, Ireland
sales@ephcontrols.com www.ephcontrols.com

EPH Controls UK
Unit E4, Welland Business Park, Valley Way, Market Harborough,
Leicestershire, LE16 7PS, United Kingdom
sales@ephcontrols.co.uk www.ephcontrols.co.uk